




# Termination instructions - Opus OC2002




Strip off minimum 30mm of cable jacket.

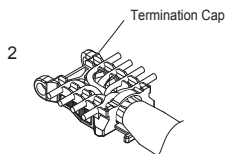


Insert cable into termination cap. Position each pair to appropriate slots according to wiring label.

Remain "un-twist" as much as possible.

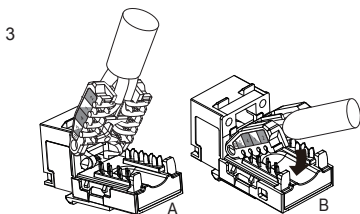

A. Attach one end of termination cap onto the hinge of jack, and attach the other end subsequently.

B. Press termination cap all the way down.

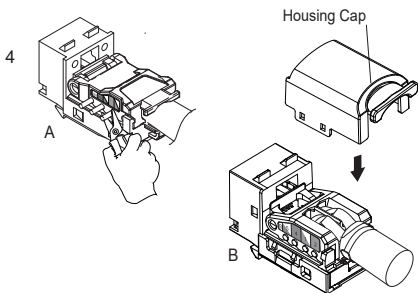

A. Trim all wires flush with wire cap, wires ends must be cut flush!

B. Place housing cap to complete installation.

## Unload the cable

