


Termination instructions


- Opus OC3002

- ① Strip off 50mm of cable jacket. Prepare the cable according to the cable type shown below.


F/FTP Cable

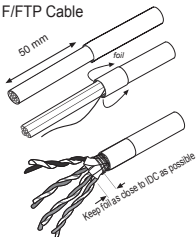


S/FTP Cable

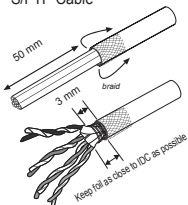



- ② Insert cable into termination cap. Position each pair to appropriate slots according to wiring label. Remain "un-twist" as much as possible.

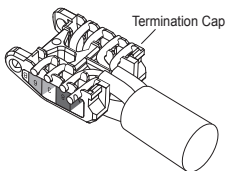


Keep the foil on each pair as long as possible

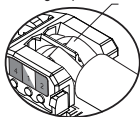

- ③ A. Attach one end of termination cap onto the hinge of jack, and attach the other end subsequently.
B. Press termination cap all the way down.

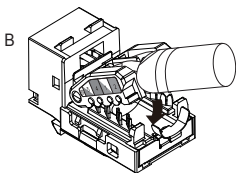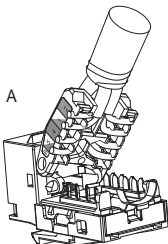

- ④ Trim all wires flush with wire cap, wires ends must be cut flush! Excess wires will cause problems when the shielded cap and jack are assembled.

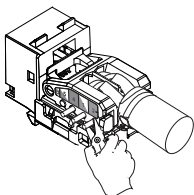

- ⑤ Place shielded cap to complete installation. Insert supplied cable tie through cable fixture hole as picture showed, tie the termination cap and jack together. Make sure the drain wire from cable is in good contact with the cable fixture to complete grounding.

